

ACTIVAL™

Two-way Ball Valve with Threaded-end Connection

General

ACTIVAL™ Model VY5302A is a two-way ball valve with threaded-end connection (ISO 7-1: 1994). It proportionally controls chilled/hot water for HVAC applications.

Model VY5302A has bronze valve body, stainless-steel ball and stem, and the components exposed to process fluid are made of other corrosion resistant materials.

Cv value and size variation of Model VY5302A are best suited to HVAC control.

Model VY5302A is used in combination with the actuator Model MY53X0A. Regarding the detailed information on the actuator, refer to:

Specifications/Instructions of ACTIVAL Model MY53X0A

HVAC: Heating, ventilation, and air conditioning
 ISO: International Organization for Standardization




Features

- Compact and lightweight:
Valve can be installed in a restricted space such as inside of a compact AHU.
- Bronze valve body applicable to PN16.
- Easy assembly with Model MY53X0A actuator using no tool, and no adjustment required.
- Equal percentage flow characteristic.

AHU: Air handling unit

IMPORTANT:
 To control ACTIVAL with a third-party controller, please consult with our sales person.

Dimensions and Maintenance Clearance

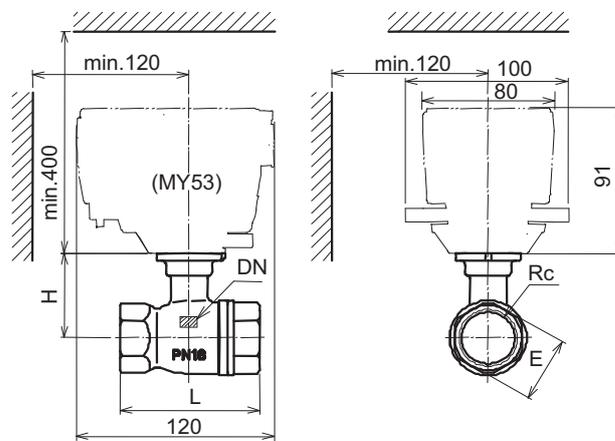

Model Numbers

Base model number	Material	—	Size/Cv	Description
VY53				Two-way valve with threaded-end connection
	0			Bronze
		2A00		Fixed
			11	DN15 (1/2") / 2.5 in Cv
			12	DN15 (1/2") / 4 in Cv
			22	DN20 (3/4") / 6.3 in Cv
			23	DN25 (1") / 10 in Cv
			31	DN32 (1 1/4") / 16 in Cv
			41	DN40 (1 1/2") / 25 in Cv
			42	DN40 (1 1/2") / 40 in Cv
			51	DN50 (2") / 40 in Cv

Model number	Dimensions				
	Valve size	Rc*	L (mm)	H (mm)	E (mm)
VY5302A0011	DN15	Rc 1/2	63	47.5	27
VY5302A0012	DN15	Rc 1/2	63	47.5	27
VY5302A0022	DN20	Rc 3/4	72	50	33
VY5302A0023	DN25	Rc 1	85	53.5	41
VY5302A0031	DN32	Rc 1 1/4	98.5	68.5	50
VY5302A0041	DN40	Rc 1 1/2	108.5	72	56
VY5302A0042	DN40	Rc 1 1/2	108.5	72	56
VY5302A0051	DN50	Rc 2	109	73	69

Note:
 * Rc: Internal tapered pipe thread complying with ISO 7-1: 1994.

Figure 1. Dimensions and maintenance clearance (mm)

Safety Instructions

Please read instructions carefully and use the product as specified in this manual. Be sure to keep this manual near by for ready reference.

Usage Restrictions

This product is targeted for general air conditioning. Do not use this product in a situation where human life may be affected. If this product is used in a clean room or a place where reliability or control accuracy is particularly required, please contact our sales representative. Azbil Corporation will not bear any responsibility for the results produced by the operators.

Warnings and Cautions

	WARNING	Alerts users that improper handling may cause death or serious injury.
	CAUTION	Alerts users that improper handling may cause minor injury or material loss.

Signs

	Alerts users possible hazardous conditions caused by erroneous operation or erroneous use. The symbol inside I indicates the specific type of danger. (For example, the sign on the left warns of the risk of electric shock.)
	Notifies users that specific actions are prohibited to prevent possible danger. The symbol inside Q graphically indicates the prohibited action. (For example, the sign on the left notifies that disassembly is prohibited.)
	Instructs users to carry out a specific obligatory action to prevent possible danger. The symbol inside d graphically indicates the actual action to be carried out. (For example, the sign on the left indicates general instructions.)

 CAUTION	
	Install and use the product under the operating conditions requirement (temperature, humidity, power, vibration, shock, mounting direction, atmospheric condition, etc.) as listed in the specifications. Failure to do so might cause fire or device failure.
	Use the product within its lifespan and avoid instrumentations that keep the product to operate excessively. Continued use beyond the lifespan might cause fire or device failure.
	Installation and wiring must be performed by qualified personnel in accordance with all applicable safety standards.
	Install the product in the proper position as specified in this manual. Excessively tight connection to a pipe or improper installation position might damage the product.
	After installation, make sure no fluid leaks from the valve-pipe connections. Incorrect installation might cause fluid leakage.
	Install the product so that no foreign objects remains inside the pipes. Be sure to provide a strainer (suitable for the process fluid) on the inflow side of the piping. Flush the piping to remove the foreign objects after installation. Foreign objects inside the piping might damage the product.
	Do not excessively screw the valve into a pipe. Doing so might damage or deform the inside of the valve causing leakage and malfunction.
	Do not allow process fluid to freeze. Doing so might damage the valve body causing leakage.
	Do not install the product nearby a steam coil or a hot-water coil. High temperature radiation might cause malfunction of the actuator assembled with the valve.
	Do not use the product in an atmosphere corrosive to the product, its actuator, and their components. Doing so might damage the product.
	Do not disassemble the product. Doing so might cause device failure.
	Do not carelessly touch the product when being used to control hot water. The product temperature goes high, and you might get burned.
	Dispose of the product as industrial waste in accordance with your local regulations. Do not reuse all or part of this product.

Specifications

Item	Specification			
Type	Two-way ball valve with threaded-end connection (internal), proportional control			
Applicable actuator to be combined	Model MY53X0A			
Pressure rating	PN16 (Max. working pressure: 1.6 MPa)			
Valve size, Cv, close-off rating	Model number	Nominal size	Cv	Close-off rating
	VY5302A0011	DN15 (1/2")	2.5	1.0 MPa
	VY5302A0012	DN15 (1/2")	4	1.0 MPa
	VY5302A0022	DN20 (3/4")	6.3	1.0 MPa
	VY5302A0023	DN25 (1")	10	1.0 MPa
	VY5302A0031	DN32 (1 1/4")	16	0.5 MPa
	VY5302A0041	DN40 (1 1/2")	25	0.5 MPa
	VY5302A0042	DN40 (1 1/2")	40	0.5 MPa
Materials	VY5302A0051	DN50 (2")	40	0.5 MPa
	Body	Cast bronze (equivalent to: - CuAn5An5Pb5-C (DIN EN1982) for global standard - CAC406 (JIS) for Japanese standard)		
	Ball	Cast stainless steel		
	Stem	Stainless steel		
	Seat ring	PTFE		
	O-ring	EPDM		
End connection	Internal threaded-end (equivalent to ISO 7-1: 1994)			
Applicable fluid	Chilled/hot water, brine (ethylene glycol solutions, 50 wt.% max.)			
Allowable fluid temperature	0 °C to 100 °C (non-freezing)			
Flow characteristic	Equal percentage			
Rangeability	100 : 1			
Seat leakage in fully closed position	0.01 % of rated Cv value (0.0006 Cv or less for DN15 models)			
Mounting position	On vertical / horizontal pipe			
Weight (Actuator in combination is NOT included.)	VY5302A0011	0.4 kg		
	VY5302A0012	0.4 kg		
	VY5302A0022	0.6 kg		
	VY5302A0023	0.8 kg		
	VY5302A0031	1.2 kg		
	VY5302A0041	1.5 kg		
	VY5302A0042	1.5 kg		
	VY5302A0051	1.8 kg		

DIN: Deutsche Industrie Normen


EPDM: Ethylene-propylene-diene copolymer

JIS: Japanese Industrial Standards


PTFE: Polytetrafluoroethylene

Parts Identification and Materials

Valve size: DN15 to DN40

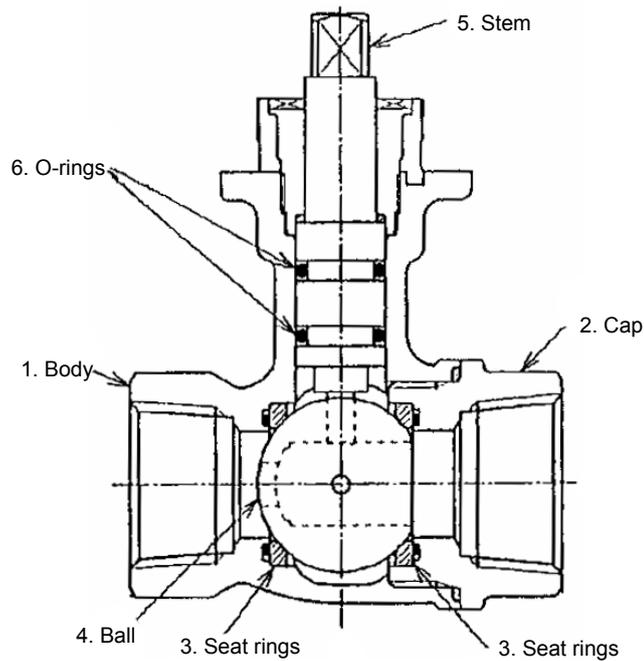

Valve size: DN50

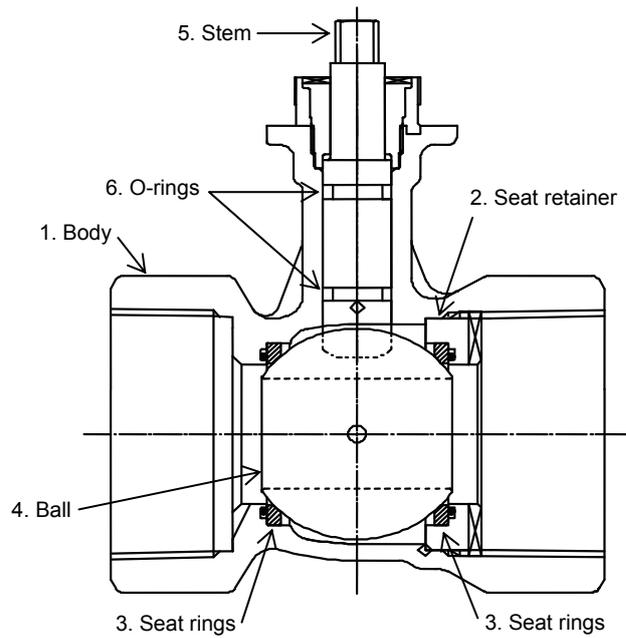

No.	Part name	Material
1	Body	Cast bronze (equivalent to: - CuAn5An5Pb5-C (DIN EN1982) - CAC406 (JIS))
2	Cap	Cast bronze (equivalent to CuAn5An5Pb5-C (DIN EN1982))
3	Seat ring	PTFE
4	Ball	Stainless steel
5	Stem	Stainless steel
6	O-ring	EPDM

Figure 2. Parts identification and materials: DN15 to DN40 valve

No.	Part name	Material
1	Body	Cast bronze (equivalent to: - CuAn5An5Pb5-C (DIN EN1982) - CAC406 (JIS))
2	Seat retainer	Copper alloy
3	Seat ring	PTFE
4	Ball	Stainless steel
5	Stem	Stainless steel
6	O-ring	EPDM

Figure 3. Parts identification and materials: DN50 valve

Flow Characteristic

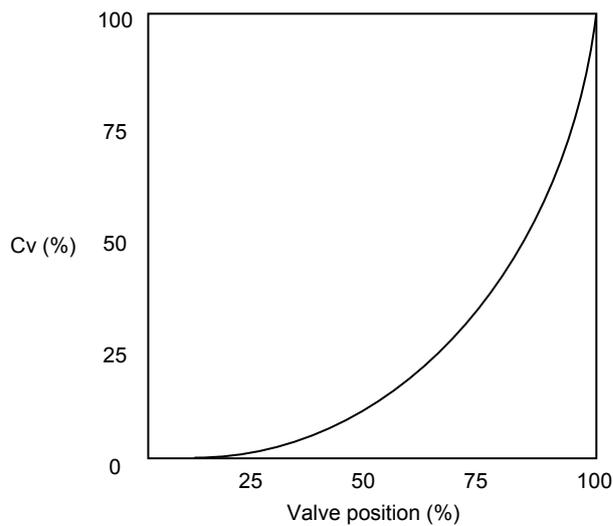


Figure 4. Flow characteristic diagram

Installation

⚠ CAUTION	
❗	Installation and wiring must be performed by qualified personnel in accordance with all applicable safety standards.
❗	Install the product in the proper position as specified in this manual. Excessively tight connection to a pipe or improper installation position might damage the product.
❗	After installation, make sure no fluid leaks from the valve-pipe connections. Incorrect installation might cause fluid leakage.
❗	Install the product so that no foreign objects remains inside the pipes. Be sure to provide a strainer (suitable for the process fluid) on the inflow side of the piping. Flush the piping to remove the foreign objects after installation. Foreign objects inside the piping might damage the product.

- To remove foreign substances inside the pipes, install a strainer on the inflow side of each valve. In case that the strainers cannot be installed on the inflow side of each valve, install it on the pipe diverting sections (sections diverting from main piping system to sub piping system).
- Install the valve so that the flow direction of process fluid agrees with the arrow indicated on the valve body.

Installation location

⚠ CAUTION	
⊘	Do not install the product nearby a steam coil or a hot-water coil. High temperature radiation might cause malfunction of the actuator assembled with the valve.
⊘	Do not use the product in an atmosphere corrosive to the product, its actuator, and their components. Doing so might damage the product.

- Install the valve assembled with the actuator in a position allowing easy access for maintenance and inspection. Fig. 1 shows the minimum clearance for maintenance and inspection. When installing the valve and actuator in a ceiling space, provide an access panel within the 50 cm radius of the valve and actuator. And, place a drain pan under the valve.
- Do not mount the valve on a pipe where water hammer occurs, or where solid objects including slug may accumulate.

Mounting position

The valve (assembled with the actuator) can be mounted in any position ranging from upright to sideways (90° tilted). The valve should be installed with its actuator vertically positioned above the valve body. However, the valve must be installed always in upright position outdoors.


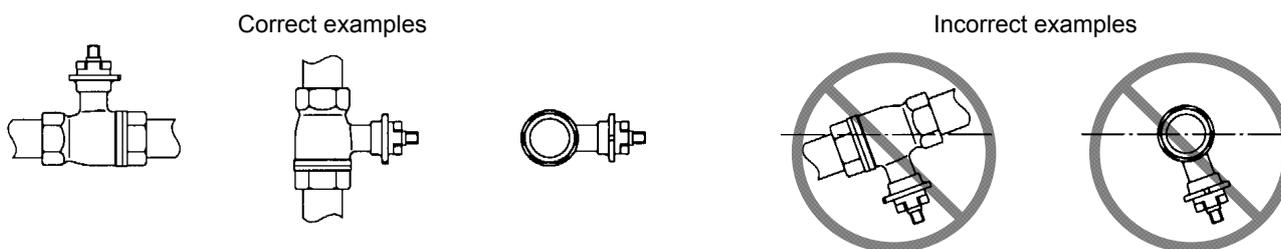


Figure 5. Mounting positions of the valve

Piping

- Install a bypass pipe and gate valves on the inflow, outflow, and bypass sides. Also, install a strainer (with 40 or more meshes) on the inflow side.
- When installing the valve to pipes, do not allow any object, such as chips, to get inside a pipe or valve. Valve cannot fully closes, or the valve seat may get damaged causing fluid leakage, due to an foreign object jammed inside the valve.
- When piping, do not apply too much sealing material, such as solidifying liquid and tape, to the pipe connection sections so that these materials flow into the valve. Valve cannot fully closes, or the valve seat may get damaged causing fluid leakage, due to the sealing material jammed inside the valve.
- When connecting the valve to pipes, hold the valve body (where a pipe is screwed) with a tool such as a wrench, and screw the pipe into the valve. (See Fig. 6.) Do not apply excessive torque to the pipe. Refer to the table in Fig. 6 for the recommended torque.

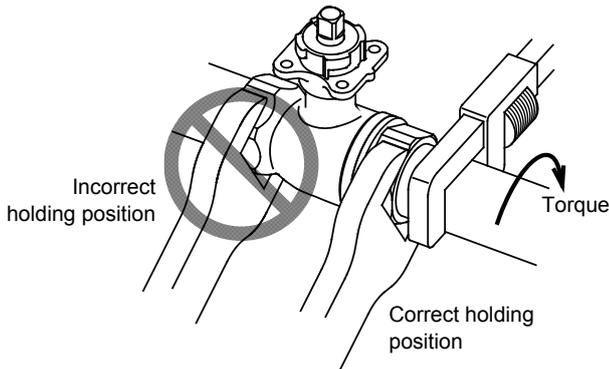

Recommended torque to screw into the pipe						
Valve size (DN)	15	20	25	32	40	50
Max. torque (N·m)	40	60	100	120	150	200

Figure 6. Valve connection to a pipe

- Before activating the valve and actuator, flush the pipes (with the valve and actuator installed) at the maximum flow rate to remove all the foreign substances. Fully open (in 100 % position) the valve to flush. (Factory preset position: 100 %)

Heat insulation

Do not apply heat insulation to the joint surface. Correctly apply heat insulation to the valve as shown in Fig. 7.

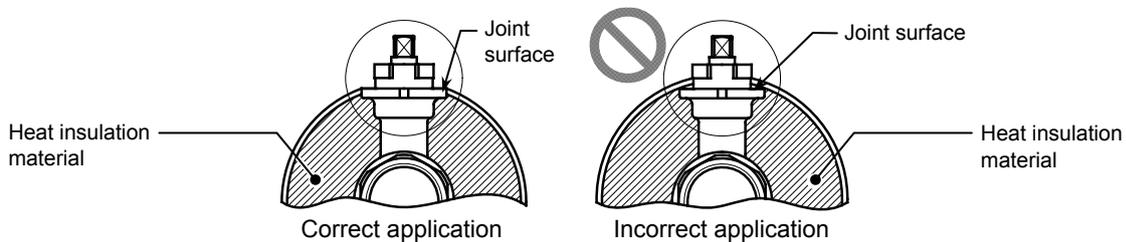


Figure 7. Heat insulation

Factory preset position

ACTIVAL is set in fully open (100 %) position before shipment.

Assembling the valve Model VY5302A with the actuator Model MY53X0A

IMPORTANT:

- The actuator can be horizontally rotated every 90 degrees to fit into the valve mounting position (4 mounting positions). Make sure the positions of the actuator and the valve as follows, referring to Fig. 8:
 - Actuator: Indicator/manual lever points at 100 (fully open position).
 - Valve: An arrow on the top of the stem points at 100 (fully open position).
(Align the hole on the side of the stem with the tip at the joint surface as 'a' in Fig. 8 shows.)
- Set the ACTIVAL (actuator and valve) in 100 % position when changing the mounting position.
If the valve in 0 % position is assembled with the actuator in 100 % position, the actuator put torque on the closed valve, and the gear of the actuator gets damaged.
If the valve and the actuator are assembled despite their positions unmatched, they might operate reversely and become unable to control the process fluid.

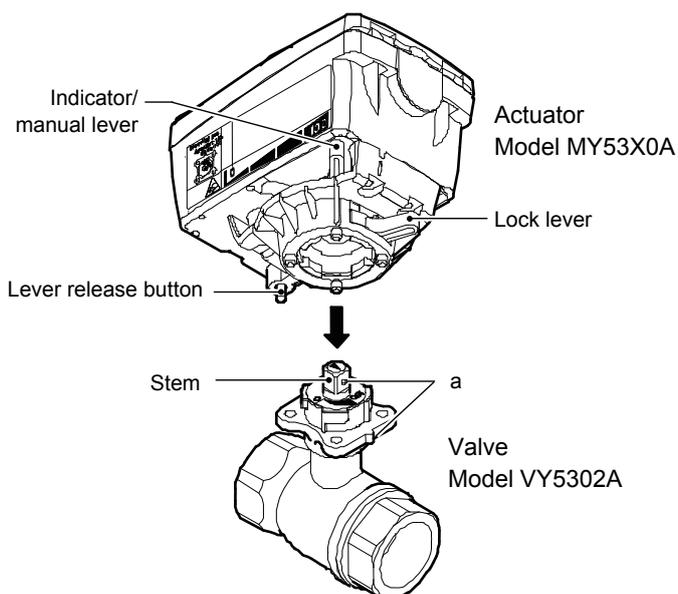


Figure 8. Mounting the actuator onto the valve

Mounting procedure

- 1) Manually turn the indicator/manual lever of the actuator to "100" with the lever release button pressed.

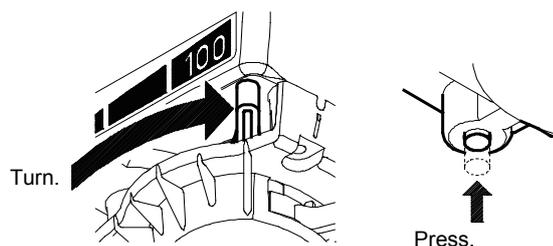


Figure 9. Indicator/manual lever at 100 % (fully open) position

- 2) Move the lock lever to right-end to unlock.

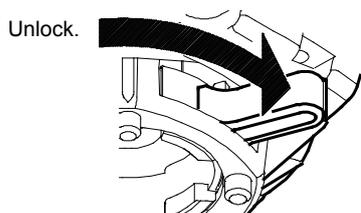


Figure 10. Unlocking the lock lever

- 3) Confirm that the arrow on the top of the valve stem points at "100". A hole on the side of the stem faces the same direction at which the tip of the valve joint surface (with the actuator) points when the valve position is fully open. (See 'a' in Fig. 8.)

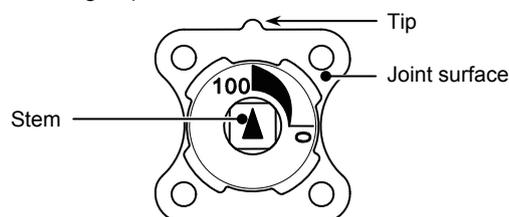


Figure 11. Valve stem pointing at 100 % (fully open) position

- 4) Assemble Model MY53X0A actuator with the valve. Engage 4 pins of the actuator with the mating holes on the valve joint surface.
- 5) Move the lock lever to left-end to lock. Locked position is indicated with the groove as shown in Fig. 12.

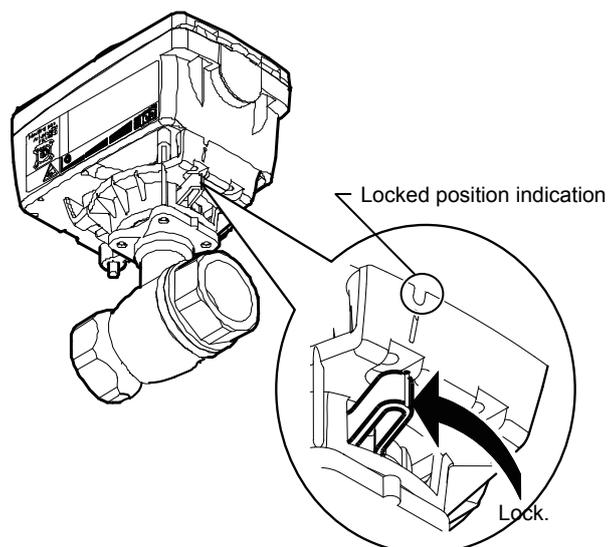


Figure 12. Locking the lock lever

Inspection and Troubleshooting

 CAUTION
 Do not carelessly touch the product when being used to control hot water. The product temperature goes high, and you might get burned.

- Manually open/close the product at least once a month if it is left in inactive state for a long period after installation.
- Inspect the product according to Table 1.
- Visually inspect the product (e.g., fluid leakage) every six months. If any of the problems described in Table 2 are found, take corresponding actions shown in the table.
If your problem is not solved by the corresponding action, please contact us.

Table 1. Inspection items and details

Inspection item	Inspection interval	Inspection detail
Visual inspection	Semiannual	<ul style="list-style-type: none"> • Loosened lock lever • Valve and actuator damages • Fluid leakage from the gland/pipe connecting part
Operating status	Semiannual	<ul style="list-style-type: none"> • Unstable open/close operation • Abnormal noise and vibration
Routine inspection	Any time	<ul style="list-style-type: none"> • Abnormal noise and vibration • Unstable open/close operation • Valve hunting

Table 2. Troubleshooting

Problem	Part to check	Action
Valve does not operate smoothly / valve stops halfway / valve does not operate at all.	Conditions of the power applied and of the input signal applied to the actuator. Wiring condition/disconnected wires of the actuator. Foreign substance jammed.	Check the power supply and the controller connected to. Check the wiring. Remove foreign substance by manually opening the valve.
Fluid leaks to the outside of the valve when the assembled actuator fully closes the valve.	Confirm the mounting procedure referring to the section Assembling the valve Model VY5302A with the actuator Model MY53X0A.	Dismount and remount the actuator according to the correct mounting procedure.
Valve hunting occurs.	Secondary pressure condition. Differential pressure condition. Control stability.	Reset and adjust the valve inlet/outlet pressure. Modify control parameter/PID setting of the controller in connection to the assembled actuator.
The auxiliary switch of the assembled actuator does not operate.	Auxiliary switch (cam switch) condition. Wiring condition/disconnected wires of the actuator.	Redo the cam switch setting. Check the wiring.
Connecting part between the valve and the actuator vibrates or produces an abnormal noise.	Lock lever condition of the actuator. Yoke damages.	Lock the lock lever. Consult with our sales/service personnel.
Water flowing sound level is too high.	—	Consult with our sales/service personnel.
The assembled actuator in operation produces an abnormal noise.	—	Consult with our sales/service personnel.
Voltage/current input signal of the assembled actuator disagrees with the feedback output signal.	To completely shut off the valve, valve open and close (0-100% position) operation is controlled by 10-90 % range of the actuator voltage/current input signal. Voltage/current input signal therefore disagrees with the feedback signal, and this is not an error.	

ACTIVAL is a trademark of Azbil Corporation in Japan or in other countries.



Specifications are subject to change without notice.

Azbil Corporation
Building Systems Company

<http://www.azbil.com/>